


### Repair instructions - replacement of snap-locks

1. Cut the jointing points around the snap-lock with a cutter (e.g. NT cutter). Be very careful not to damage the rubber seal.
2. Open the screws and take out the snap-locks.
3. Insert the snap-lock again and fix with the plastic tubes and the screws.
4. Now the rubber seal and the black guide sleeve must be affixed. The jointing points must be warmed up for approx. 10 seconds with an industrial dryer in order to reduce the reaction time of the adhesive.

Apply the adhesive very thinly

- Match the parts and hold them until they stick together (approx. 20 seconds)
- Proceed in the same way with the black guide sleeve (instead of holding it manually you may use clamps)

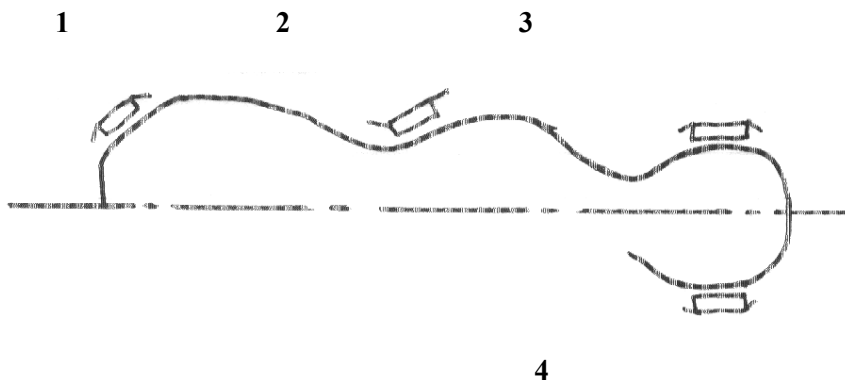

**Important: The locks must be warm before you can flex them.**